

EP 60/13 flex life

Solidcore Skirting especially for LVT Design Floors



All patterns ex
warehouse available
starting 01.08.2014

Döllken Weimar's solidcore skirtings are unique in their production technology: co-extrusion. Certified high density pine wood fibre cores are encased in a hard-wearing polyolefin. Döllken solidcore skirtings are very environment-friendly and therefore certified e.g. by GREENGUARD Certification. Very practical and timesaving; all solidcore skirtings can be installed with our system tools.

The key benefits of the
EP 60/13 flex life:


- **Patterns matching to flooring collections**
- **Flexible lips to wall and flooring**
- **Resistant surface**
- **High flexibility to wall and flooring**
- **Accessories not necessary, simply notch**




Döllken patterns *




2322 (W 322) **2323** (W 323) **2324** (W 324) **2325** (W 325) **2326** (W 326) **2327** (W 327) **2328** (W 328)

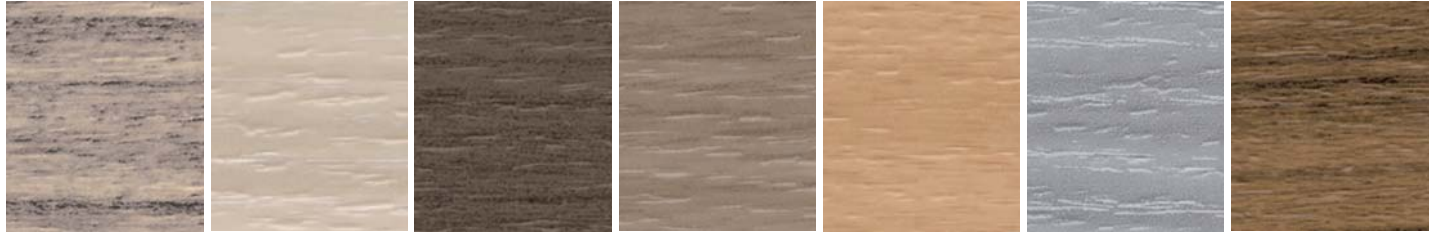


2329 (W 329) **2330** (W 330) **2331** (W 331) **2332** (W 332) **2333** (W 333) **2334** (W 334) **2335** (W 335)

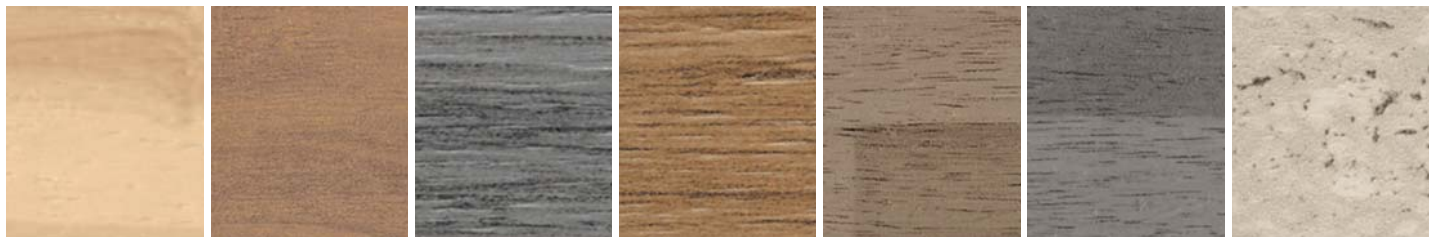

2336 (W 336) **2337** (W 337) **2338** (W 338) **2339** (W 339) **2340** (W 340) **2341** (W 341) **2342** (W 342)

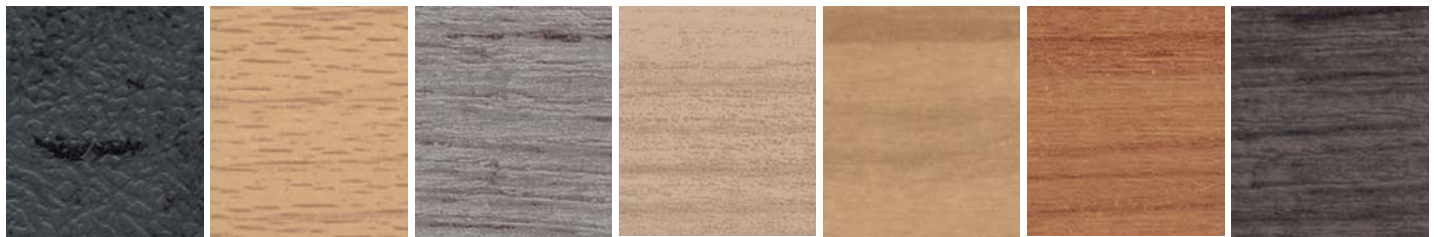


2343 (W 343) **2356** (W 356) **2357** (W 357) **2358** (W 358) **2360** (W 360) **2361** (W 361) **2362** (W 362)

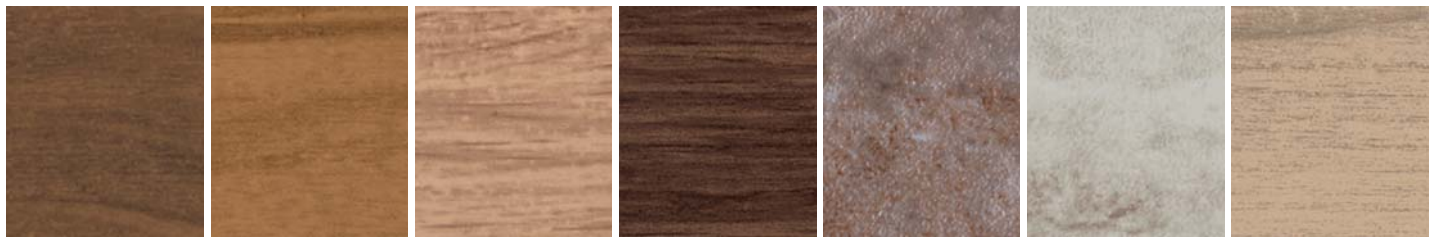

2363 (W 363) **2364** (W 364) **2365** (W 365) **2366** (W 366) **2367** (W 367) **2368** (W 368) **2369** (W 369)



2370 (W 370) **2371** (W 371) **2372** (W 372) **2373** (W 373) **2375** (W 375) **2377** (W 377) **2379** (W 379)

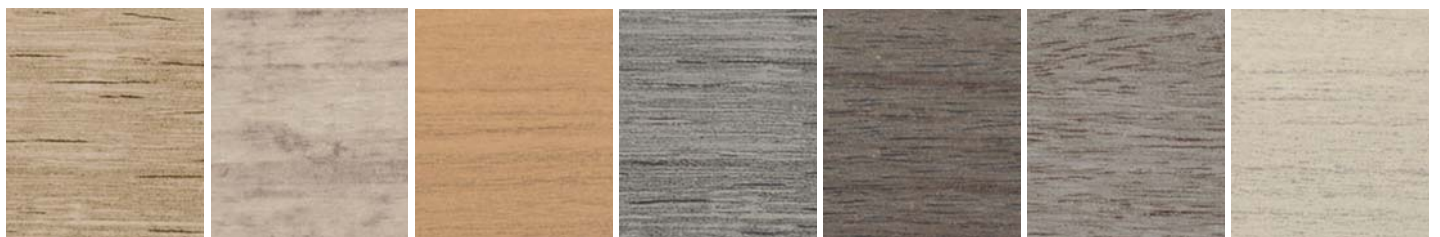

2380 (W 380) **2381** (W 381) **2382** (W 382) **2383** (W 383) **2384** (W 384) **2385** (W 385) **2386** (W 386)


Döllken patterns



2388 (W 388) **2389** (W 389) **2390** (W 390) **2391** (W 391) **2392** (W 392) **2393** (W 393) **2394** (W 394)




2395 (W 395) **2396** (W 396) **2398** (W 398) **2399** (W 399) **2400** (W 400) **2401** (W 401) **2402** (W 402)

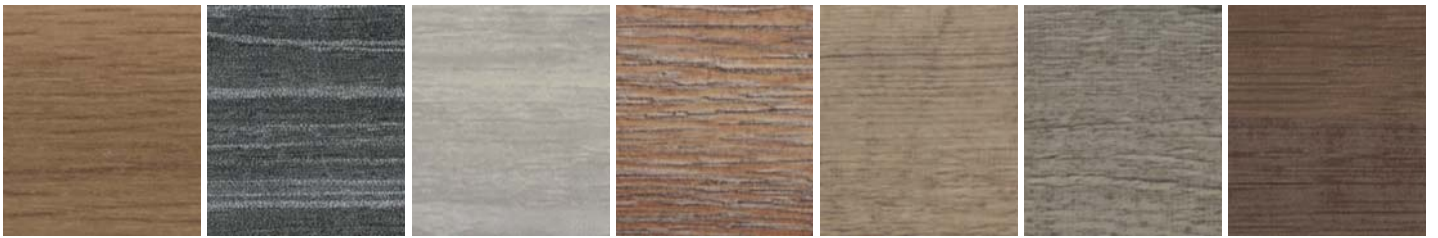


2403 (W 403) **2405** (W 405) **2406** (W406) **2407** (W 407) **2408** (W 408) **2409** (W 409) **2410** (W 410)



2411 (W 411) **2412** (W 412) **2413** (W 413) **2414** (W 414) **2415** (W 415) **2416** (W 416) **2417** (W 417)

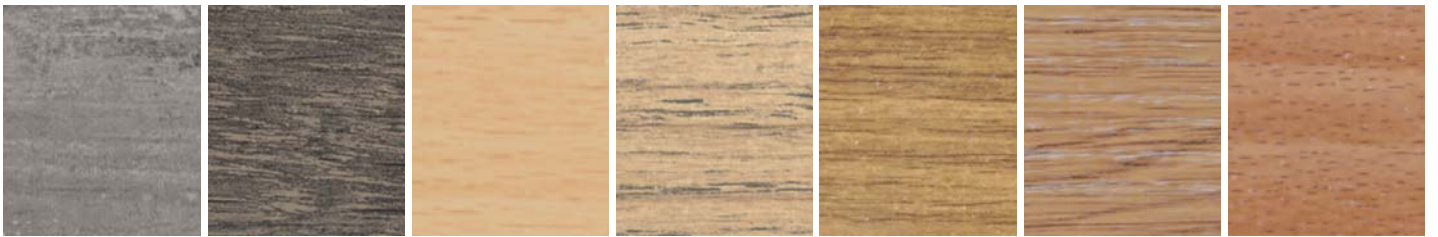

2418 (W 418) **2420** (W 420) **2422** (W 422) **2423** (W 423) **2424** (W 424) **2425** (W 425) **2426** (W 426)

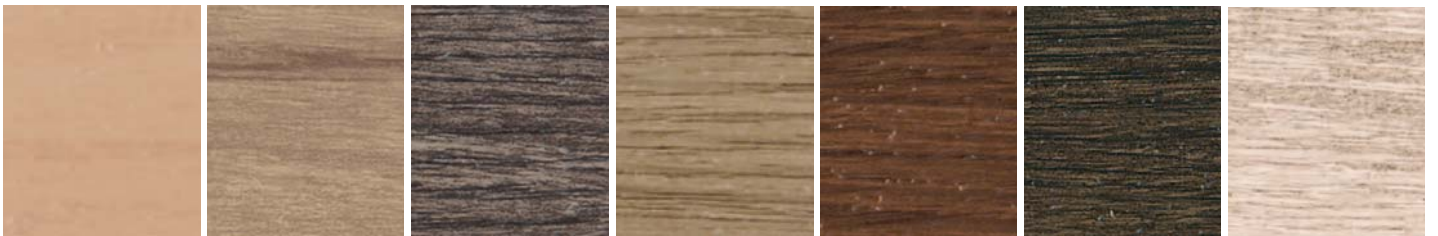


2427 (W 427) **2428** (W 428) **2429** (W 429) **2430** (W 430) **2432** (W 432) **2484** (W 484) **2485** (W 485)




2486 (W 486) **2487** (W 487) **2489** (W 489) **2490** (W490) **2491** (W491) **2492** (W492) **2493** (W493)


Döllken patterns

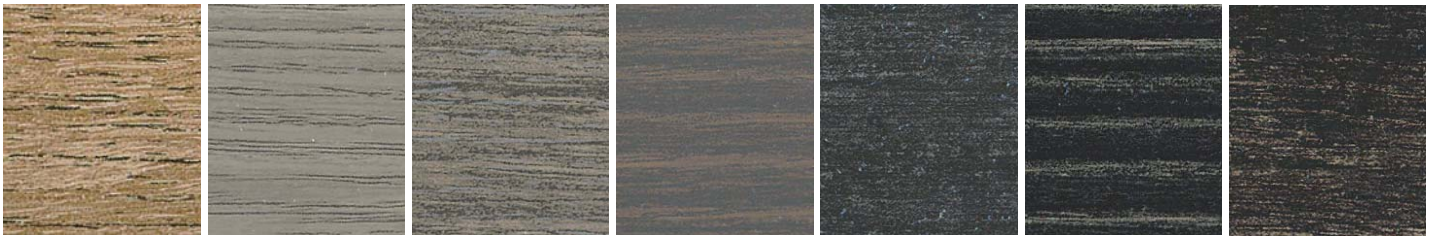


2494 (W 494) **2495** (W 495) **2496** (W 496) **2497** (W 497) **2498** (W 498) **2499** (W 499) **2550** (W 550)

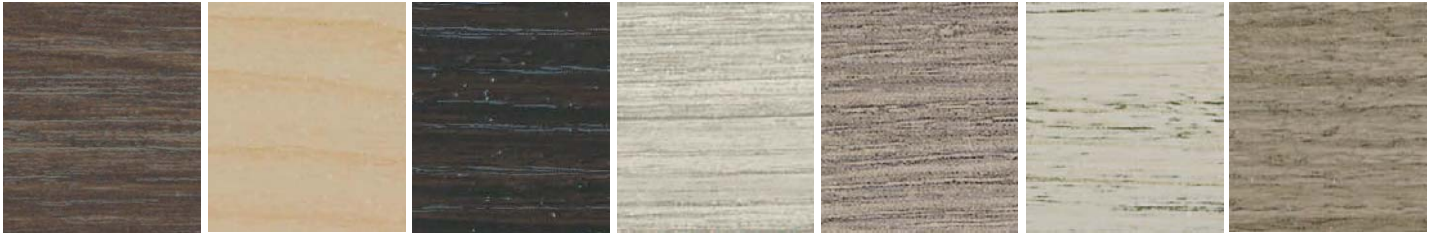


2553 (W 553) **2554** (W 554) **2555** (W 555) **2556** (W 556) **2557** (W 557) **2562** (W 562) **2563** (W 563)

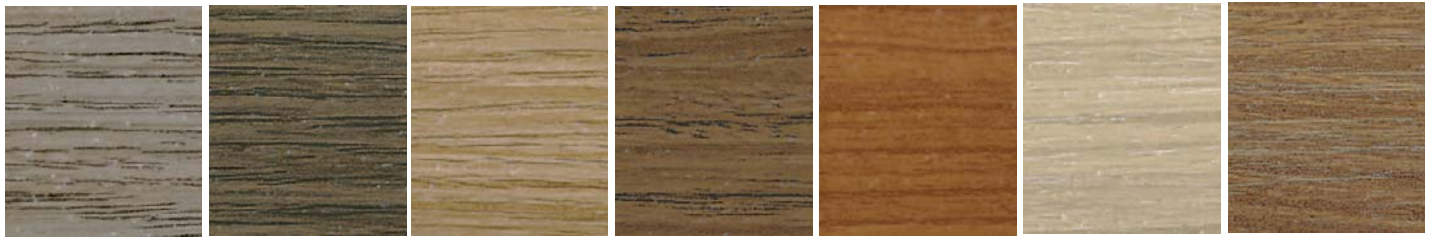

2564 (W 564) **2565** (W 565) **2567** (W 567) **2568** (W 568) **2569** (W 569) **2570** (W 570) **2573** (W 573)

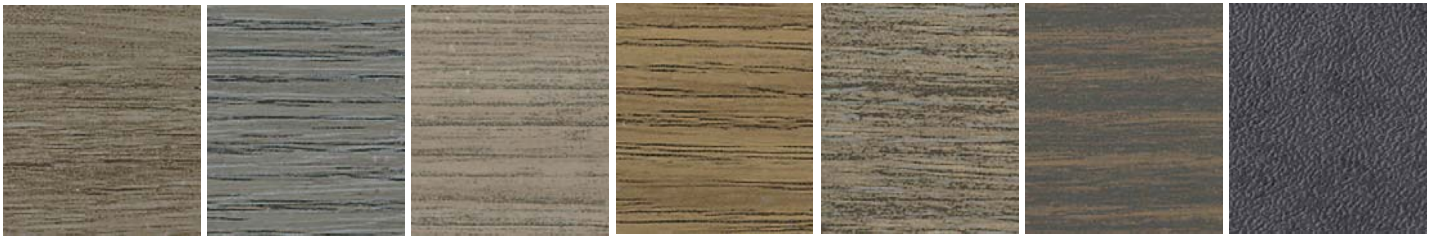

2574 (W 574) **2575** (W 575) **2580** (W 580) **2581** (W 581) **2582** (W 582) **2583** (W 583) **2584** (W 584)

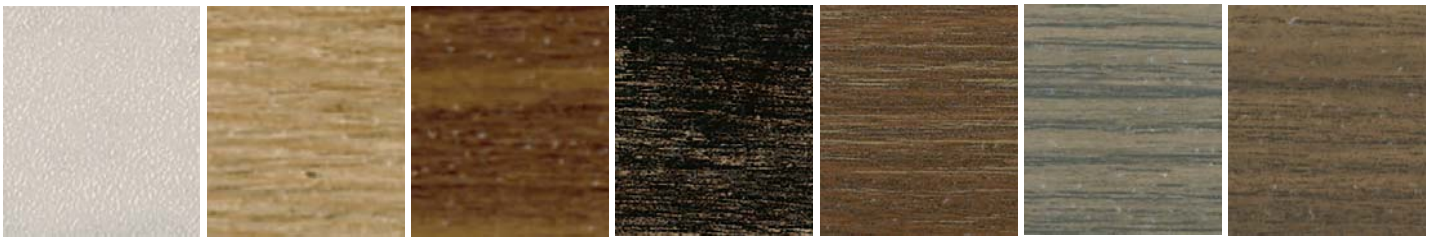

2585 (W 585) **2586** (W 586) **2587** (W 587) **2588** (W 588) **2589** (W 589) **2590** (W 590) **2595** (W 595)




2596 (W 596) **2597** (W 597) **2598** (W 598) **2599** (W 599) **2600** (W 600) **2602** (W 602) **2603** (W 603)




2605 (W 605) **2606** (W 606) **2607** (W 607) **2608** (W 608) **2609** (W 609) **2610** (W 610) **2611** (W 611)


Döllken patterns

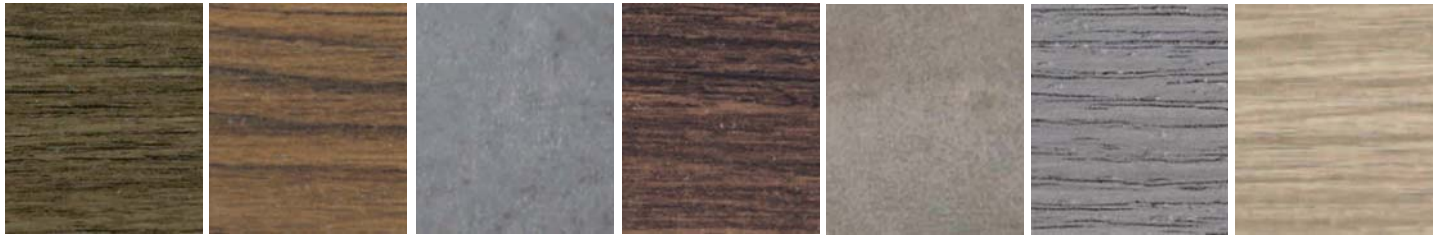


2612 (W 612) **2613** (W 613) **2615** (W 615) **2616** (W 616) **2617** (W 617) **2618** (W 618) **2619** (W 619)

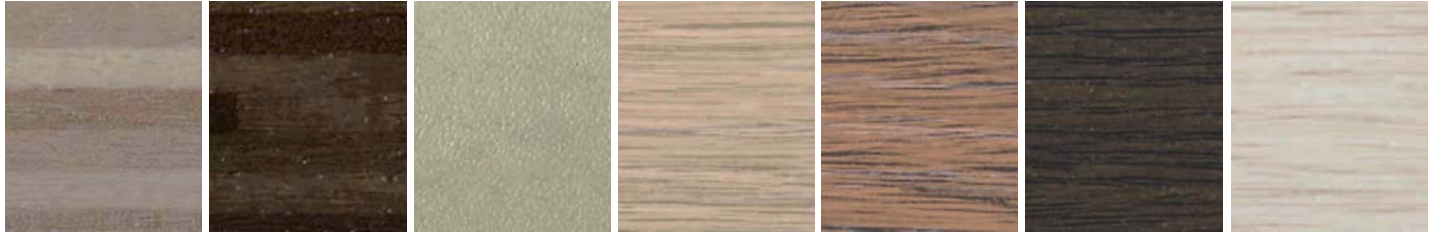


2622 (W 622) **2623** (W 623) **2625** (W 625) **2626** (W 626) **2627** (W 627) **2628** (W 628) **2629** (W 629)

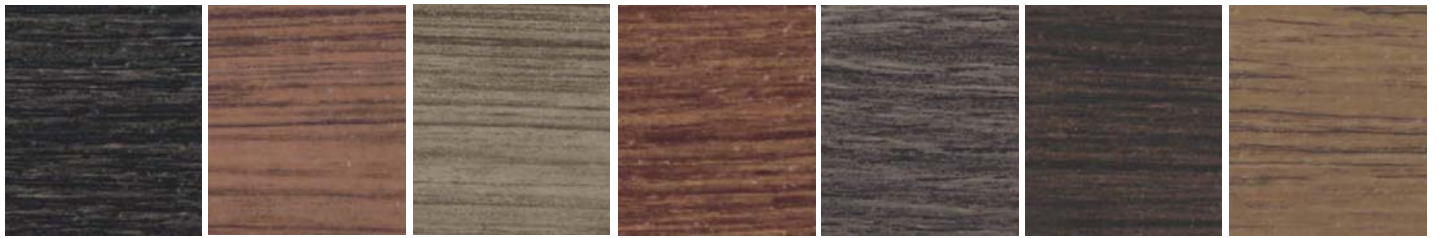


2630 (W 630) **2631** (W 631) **2632** (W 632) **2633** (W 633) **2634** (W 634) **2635** (W 635) **2636** (W 636)

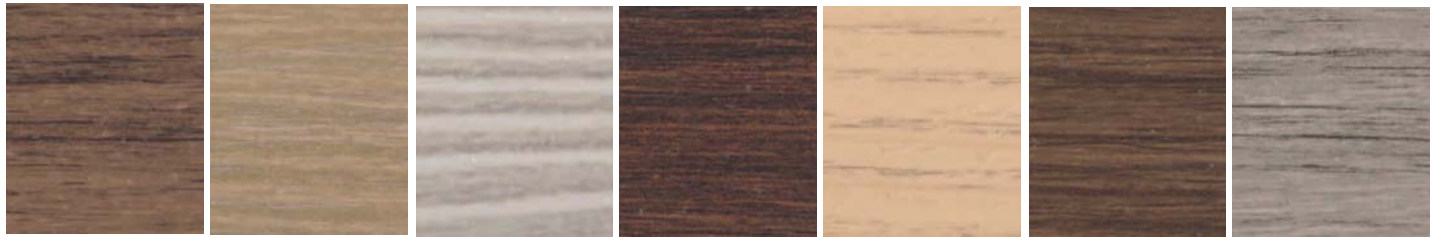

2637 (W 637) **2638** (W 638) **2639** (W 639) **2642** (W 642) **2656** (W 656) **2657** (W 657) **2658** (W 658)

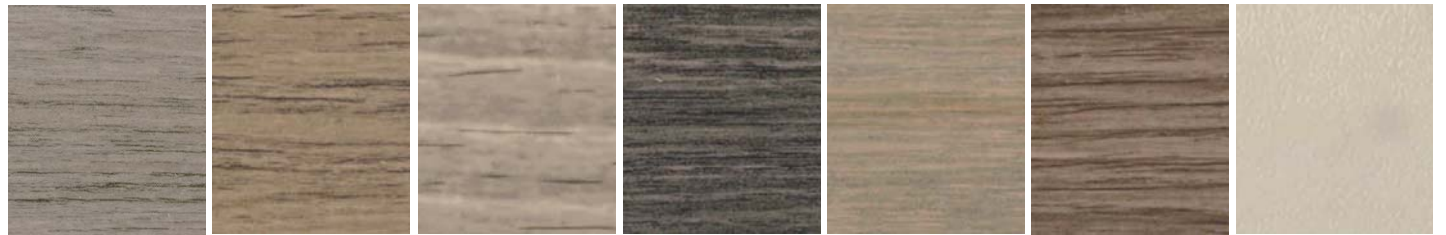

2660 (W 660) **2661** (W 661) **2662** (W 662) **2663** (W 663) **2664** (W 664) **2667** (W 667) **2711** (W 711)

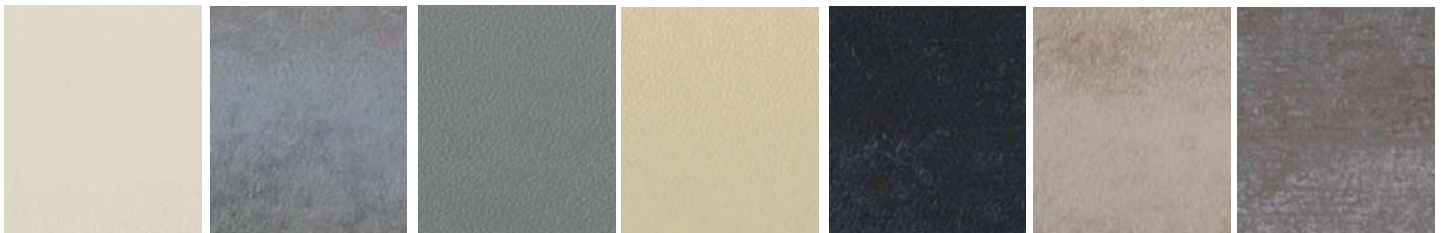


2712 (W 712) **2713** (W 713) **2714** (W 714) **2715** (W 715) **2716** (W 716) **2717** (W 717) **2718** (W 718)



2719 (W 719) **2720** (W 720) **2721** (W 721) **2722** (W 722) **2724** (W 724) **2724** (W 724) **2725** (W 725)

Döllken patterns

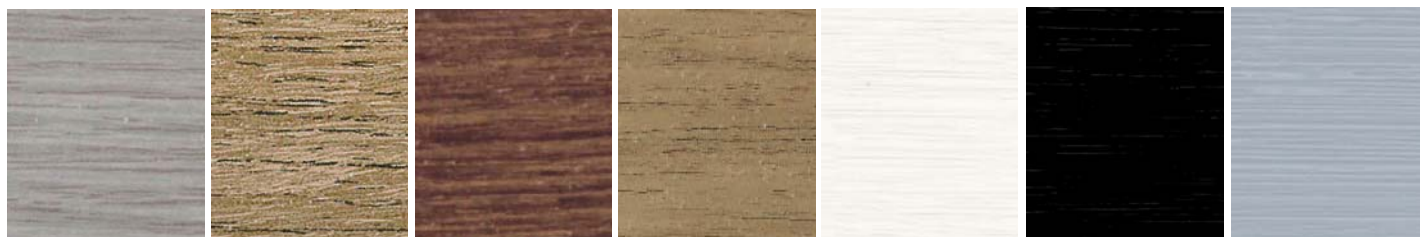

2726 (W 726)

2727 (W 727)


2728 (W 728)

2729 (W 729)

0117

0110

436A

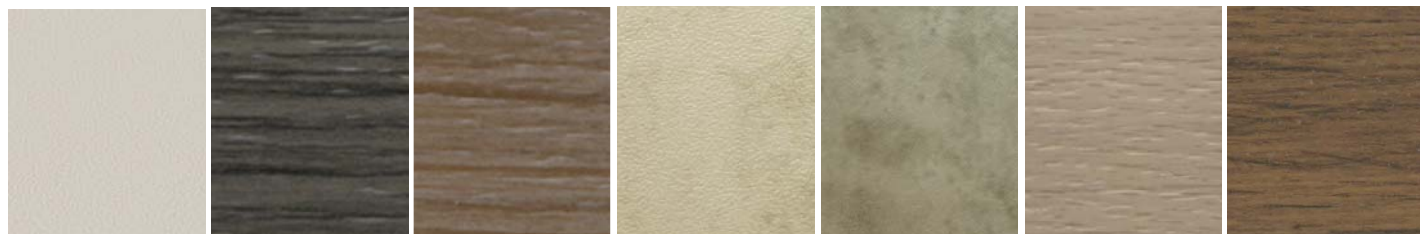

2374 (W 374)

2604 (W604)


2000

2001

2002

2003

2004

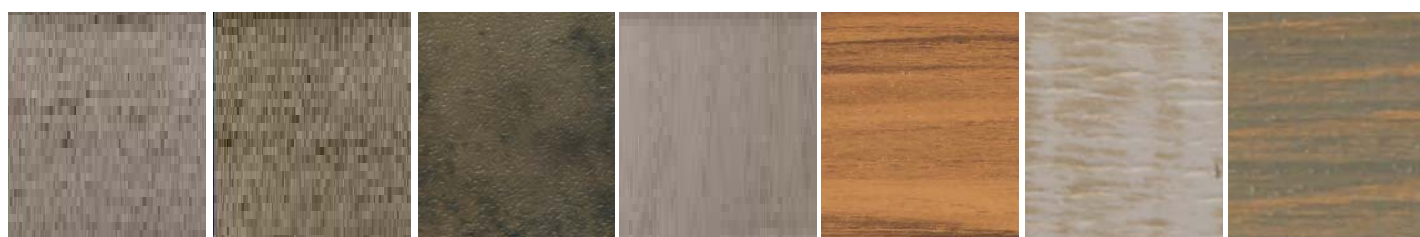

2005

2006


2007

2008

2010

2011

2012

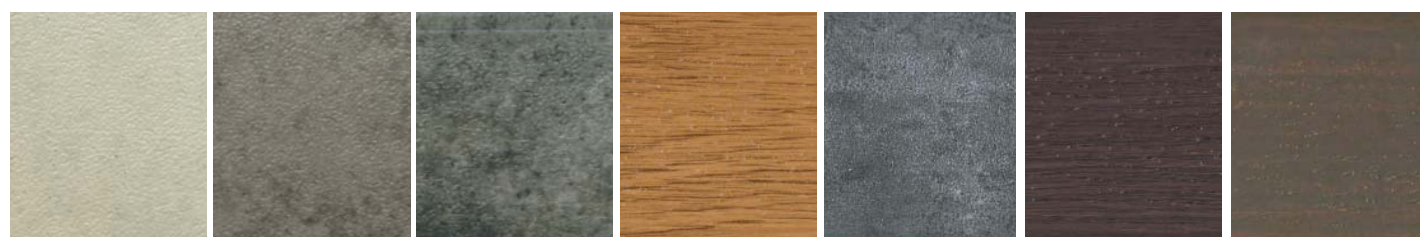

2013

2015


2016

2017

2018

2019

2020

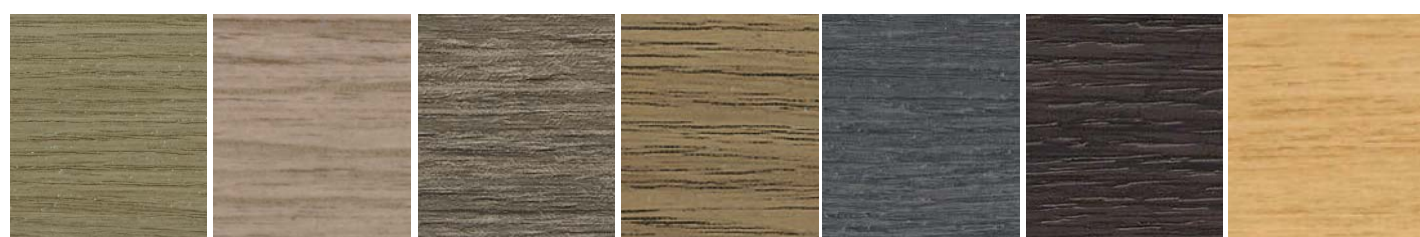

2021

2022

2023

2024

2030

2031

2032




2033

2258

EP 60/13 flex life

Solidcore Skirting especially for LVT Design Floors



TCF
totally
chlorinefree

1 sales unit = 10 x 2,50 m

Specification:

- HDF core encased in a chlorine-free, hard-wearing polyblend based on PP/TPE, with flexible lips



Installation recommendation



Döllken
Mitre Tool



Döllken
Hot-melt


Tools

- Mitre tool Type 1001. Conversion of older tools on request
- Measuring template
- Skirting scissors
- Hot-melt adhesive gun HKP 220


For mounting, we recommend using the Döllken hot-melt adhesive HKS 18/300, please consider the respective separate instructions. The type of fastening is dependent on the substance of the wall which is to be checked for the required quality and firmness by the installer. The skirting board is to be laid without stress, avoid the allowance of positive tolerances. Please consider the installation and maintenance instructions.

Instruction for notching of profile end caps


The profile end caps of the EP 60/13 can be formed without additional accessories simply by Döllken Mitre Tool from the profile. Proceed as follows:

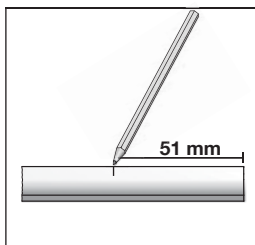


Let the end of the profile overlap with 11 mm. Measure back 51 mm on the profile from the end and mark that on the profile.

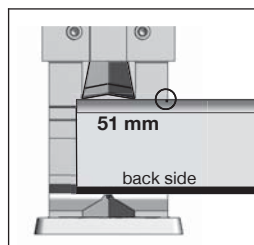

Then apply that mark at the edge of the Mitre Tool's flange, close the clamping device and notch.

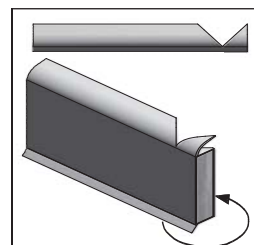

Turn the end piece around and glue the core areas.

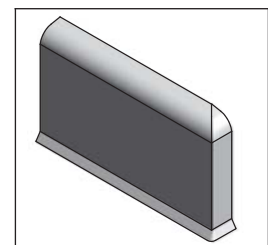

So the profile gets a pattern identical end cap at door cases, stair transitions or free ends.

EP 60/13 flex life

Solidcore Skirting especially for LVT Design Floors



The patterns of the EP 60/13 flex life are matching to flooring collections of leading deliverers of LVT floorings. Daily new patterns are added. Visit our Pattern-Finder on our web site, surely you will find the matching skirting to your flooring.

Visit our Pattern-Finder on our web site:
<http://www.doellken-weimar.de/en/products/decorfinder/>

Döllken-Weimar GmbH
Gewerbegebiet U.N.O.
Stangenallee 3
99428 Nohra/ Germany
info@doellken-weimar.de www.doellken-weimar.de