

Press-on inserts for designer cover- ings and foam skirtings



Tips by the Pro

Precise punch adjustment is critical.
Please contact your dealer if your
punching results are less than perfect.

Advantages at a glance:

- matching the Döllken profile punch 2001
- white press-on inserts: for punching 2 – 3 mm thick heterogeneous designer covering strips (not suitable for PVC/CV and linoleum coverings)
- black press-on inserts: for neat punching of HSL 6 and HSL 8 foam skirtings

Any questions about the product or would you like tips by our pros? Then simply contact us:
Hotline: +49 3643/ 4170-222
or via our App!


Döllken
Profiles

we create.
we innovate.



SURTECO GROUP

Application

Press the press-on inserts into the holder

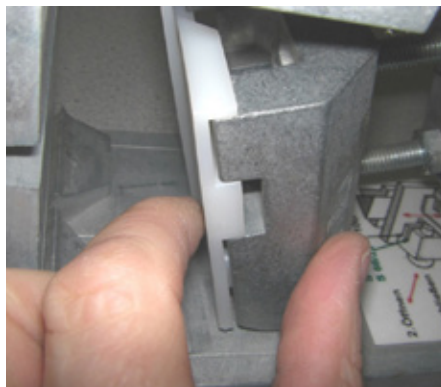


White press-on inserts:
Insert the clamping lever into the inside pocket (4.5 mm)

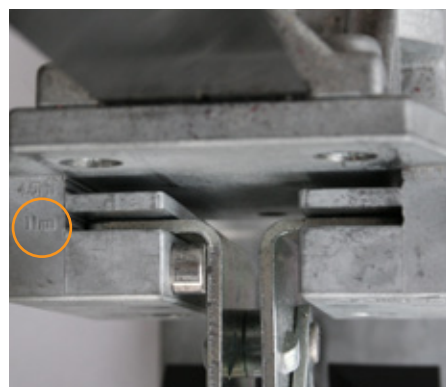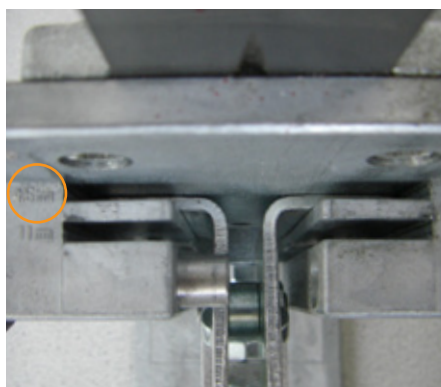

Black press-on inserts:
Insert clamping lever into the outside pocket (11 mm)

Position covering or skirting on support upright, close holder.

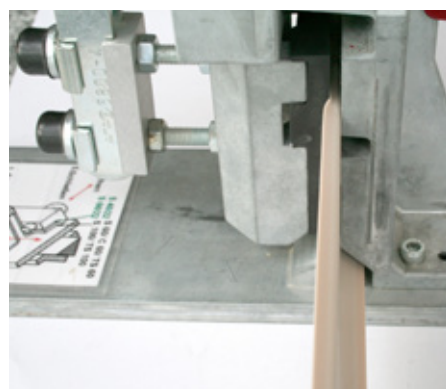

Then punch.



Attention: For floor coverings, punch only the back!



Note our installation videos and instructions! Find them at: www.doellken-profiles.com, on YouTube or in the Doellken App.



New installation videos at www.doellken-profiles.com, in the Doellken App or on YouTube.

Döllken Profiles GmbH
Stangenallee 3
99428 Nohra b. Weimar
Follow us on  

T: +49 3643 4170 711
F: +49 3643 4170 330
info@doellken-profiles.com
www.doellken-profiles.com